


# Teckpak A74741QA TCC Valve Repair Instruction Sheet


**Fixes: P1870 Code and sloppy lockup condition.**  
**Application 2001 and UP 4L60E Transmission**

1. Remove the pan and valve body from the transmission.
2. Remove the clip that holds the TCC Valve in place.
3. Remove the valve plug from the bore.
4. Remove the TCC outer valve and the spring.
5. The inner valve will need to remain in the bore or reinstalled.

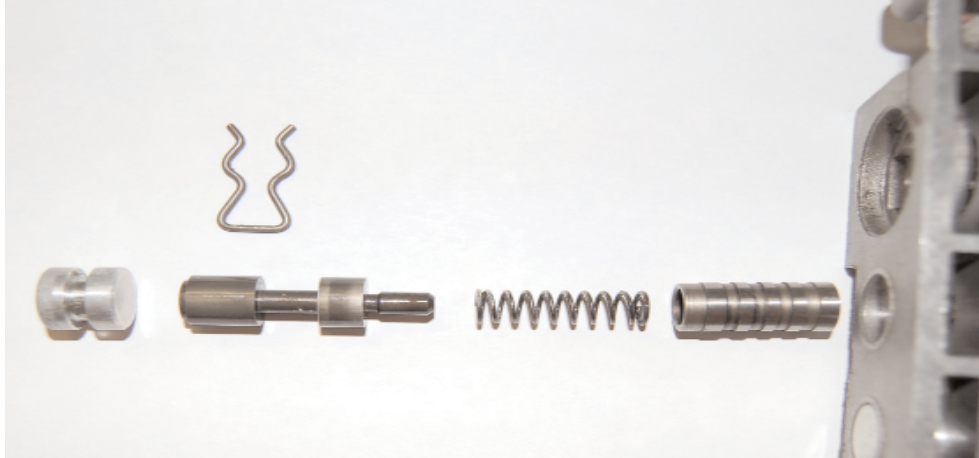

OEM TCC Componets

6. Lubricate the O-rings on the A74741QA TCC repair valve.
7. With the inner valve installed, install the A74741QA small end first.
8. The Clip will clip into the groove behind the Large O-ring on the valve.
9. You do not need the valve plug it is built onto the valve.

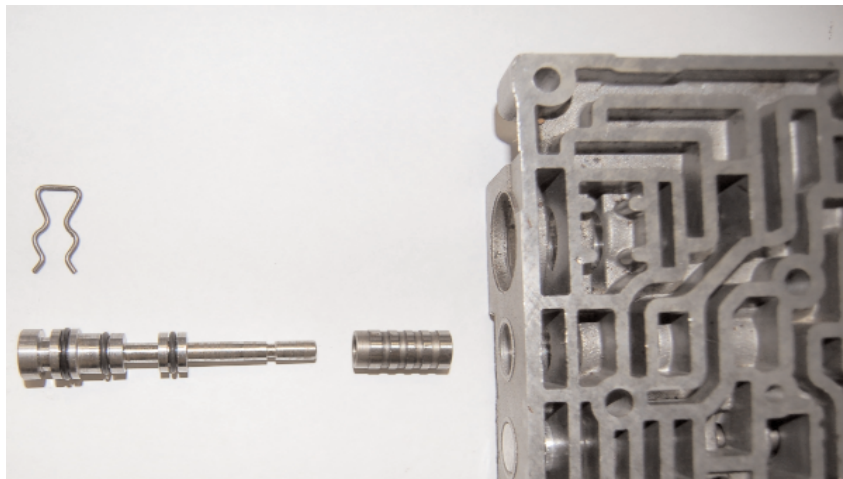

Parts needed for installation of the A74741QA Valve.

P.S. coming soon the way to install the valve without removing the Valve Body. Call your Teckpak Representative to find out more. 1-800-527-2544.