

INSTALLATION INSTRUCTIONS


# UNIVERSAL DUST COVER

**Applications:** When possible use old cover to determine starter location.  
Cut starter hole along appropriate line.

**K35803U**

**Fits:**

200C, 250, 250C, 350C, 4L60  
4-bolt 200, 200-4R, 350, 400, 700-R4, 4L60E

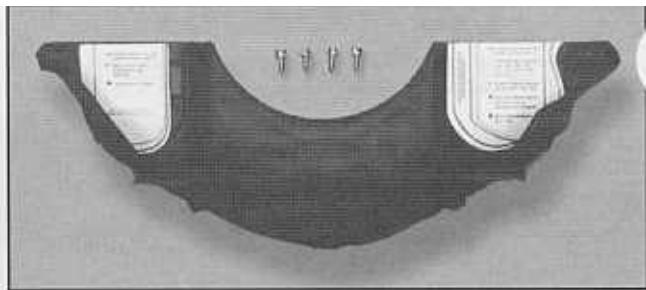

**Fits:**

**Chevrolet built engines:** 283, 292, 305, 307, 327 350, 400, 454 thru '82, '82-up 267, 305, 350, 6.2 diesel '82-up

**Cadillac built engines.**

**Buick Built engines:** 231, 252

**Most Pontiac and Oldsmobile gas engines**

**Oldsmobile:** 5.7 diesel