

INSTALLATION INSTRUCTIONS

Part# T76498-1 (FORD - Ball on shaft)



Shift Cable Repair End (Grommet)

Fits: Most ('97-'08) Ford Trucks & ('02-'05) Explorer, Expedition, Navigator & Mountaineer.

1. Dis-assemble shift cable end (see Fig. 1)
2. Using a 13/32" drill bit, drill thru the inner portion of the part shown below (see Fig. 2)
3. Re-assemble that part back into the cable and install the new clip as shown below (Fig. 3).

NOTE: Sloped edge must face up for easier replacement of the cable lock.

4. Replace the cable lock.
5. Snap the cable onto the shift arm and adjust if necessary.

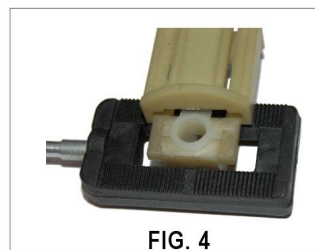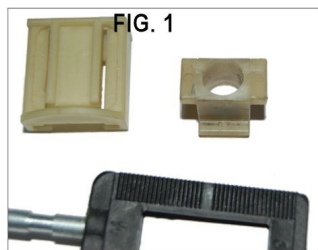

Teckpak Hotline: 1-800-527-2544
www.teckpak-fitzall.com